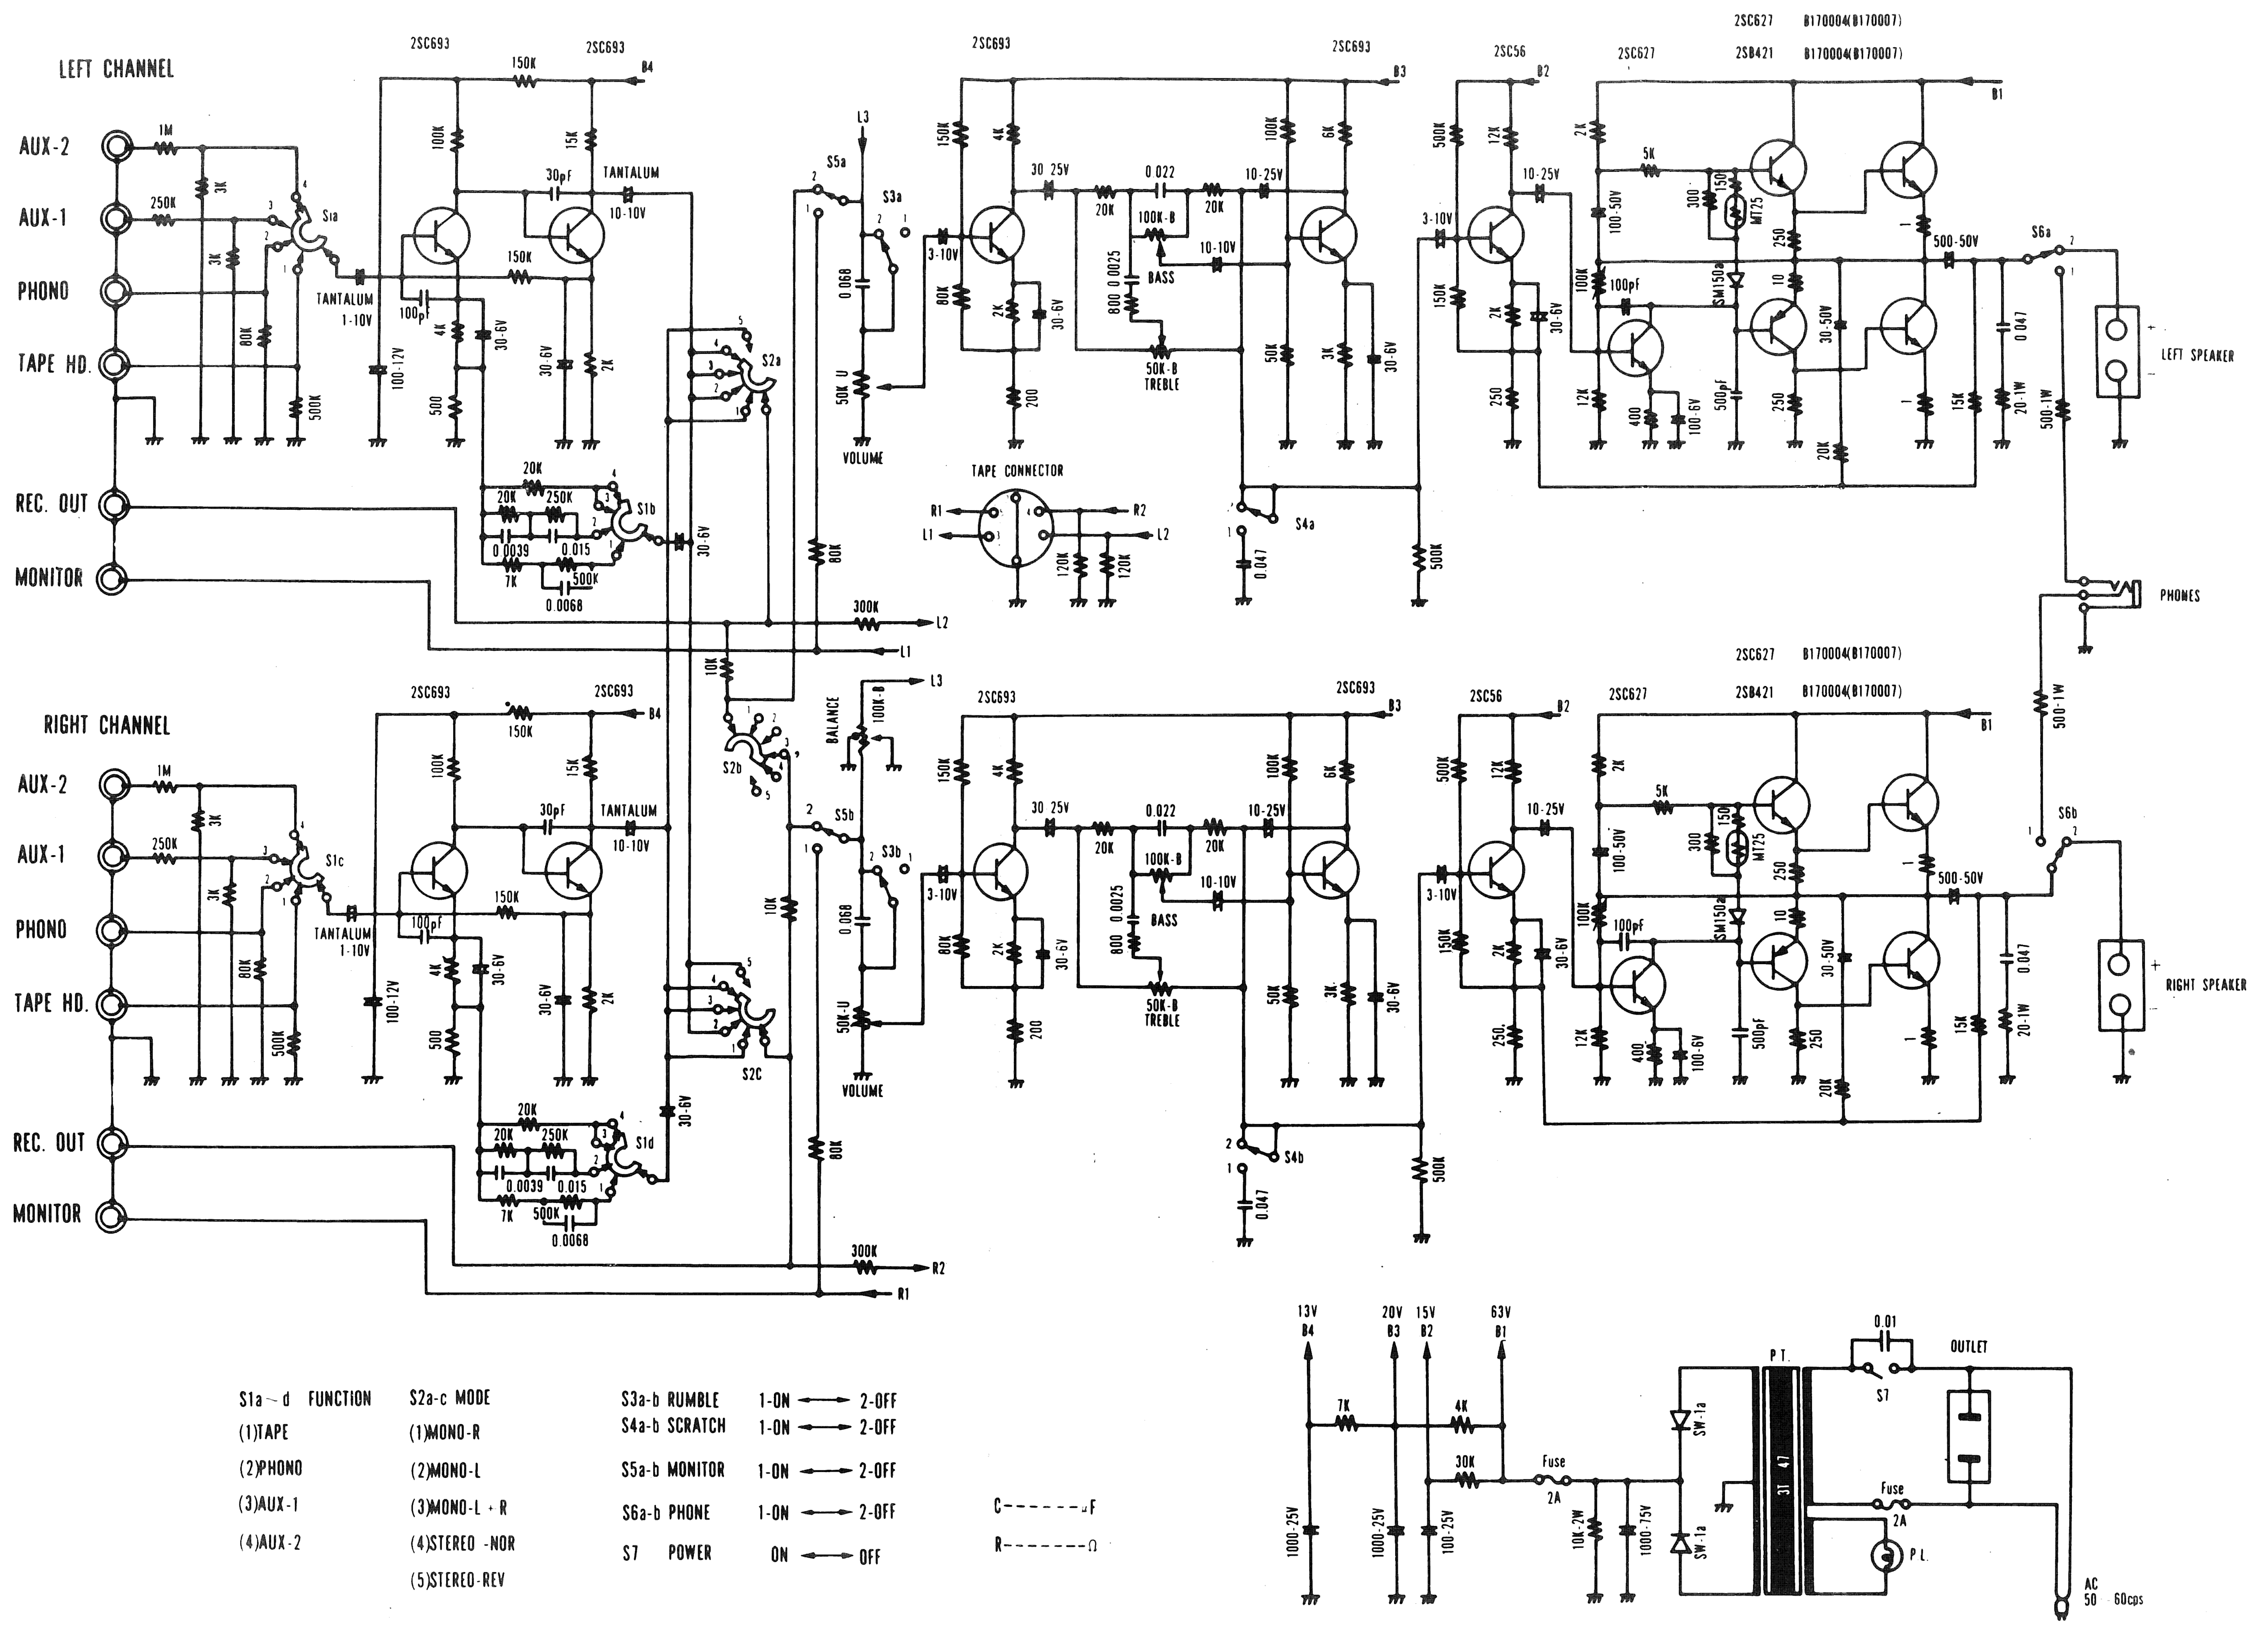
LEFT CHANNEL
AUX-2
AUX-1
PHONO
TAPE HD.
REC. OUT
MONITOR
RIGHT CHANNEL
AUX-2
AUX-1
PHONO
TAPE HD.
REC. OUT
MONITOR
2SC693
2SC56
2SC627
2SB421
B170004(B170007)
VOLUME
BALANCE
BASS
TREBLE
TAPE CONNECTOR
LEFT SPEAKER
RIGHT SPEAKER
PHONES
P.T.
OUTLET
Fuse
AC 50 60cps
S1a~d FUNCTION
(1)TAPE
(2)PHONO
(3)AUX-1
(4)AUX-2
S2a-c MODE
(1)MONO-R
(2)MONO-L
(3)MONO-L+R
(4)STEREO -NOR
(5)STEREO-REV
S3a-b RUMBLE 1-ON ←→ 2-OFF
S4a-b SCRATCH 1-ON ←→ 2-OFF
S5a-b MONITOR 1-ON ←→ 2-OFF
S6a-b PHONE 1-ON ←→ 2-OFF
S7 POWER ON ←→ OFF
C--------μF
R--------Ω

SQ-77T